

Package Contents:



**GP198**  
Sticky Suction Mount  
and Extension Arm  
for GoPro


**!** Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

**IMPORTANT:**  
Some dashboards with heavily textured or porous surfaces may require you to push down firmly on the suction base while engaging the suction lock lever to achieve the suction required to hold the mount in place.


\*If the sticky suction base becomes dirty or loses stickiness, rinse under warm water and let air dry.

GoPro® is a registered trademark of Woodman Labs, Inc. in the United States and other countries. Arkon Resources, Inc is not affiliated with Woodman Labs.


- 1 Remove screw from the 3-prong bracket and insert GoPro camera and case, then reinsert screw. Tighten as needed.

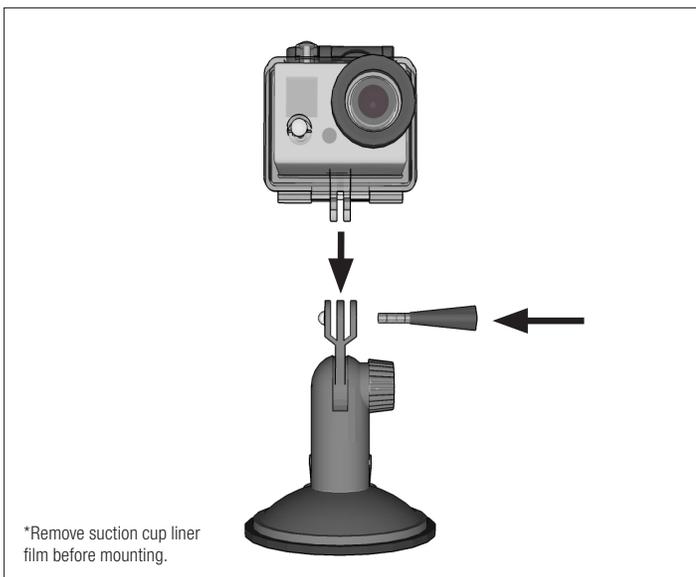


- 2 Clean surface with included alcohol pad. Firmly place mount on dash and engage suction lock lever.

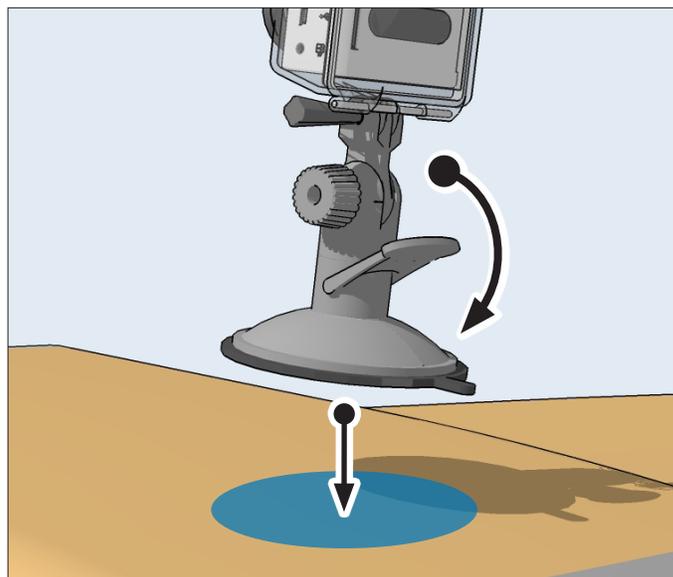

- 3 Adjust the position of the camera via the adjustment knob.

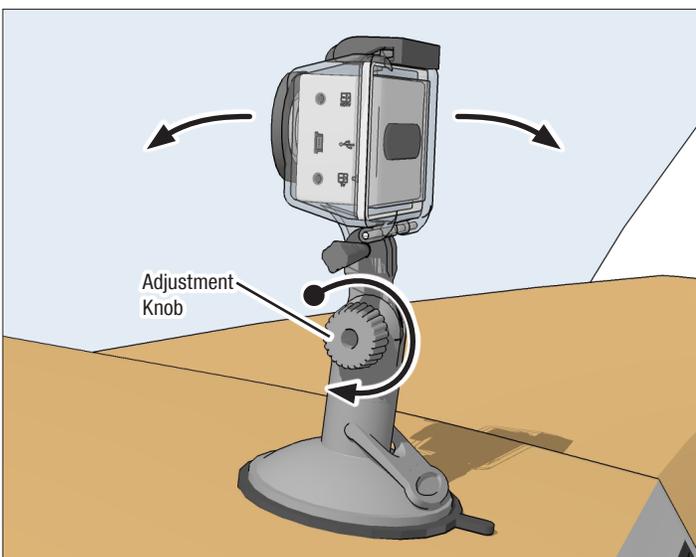

- 4 Optional extension arm can also be used.

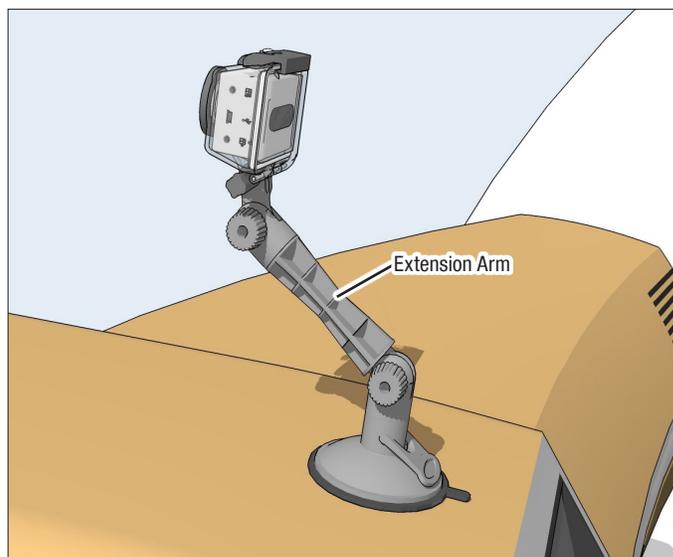

\*If the sticky suction base becomes dirty or loses stickiness, rinse under warm water with and let air dry