


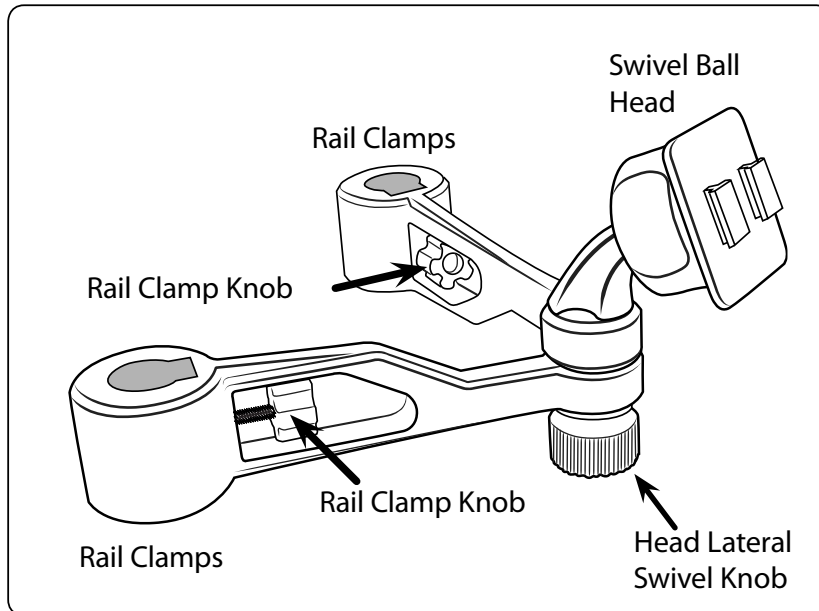


Package Contents:
(1) HM001-SBH

 Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

Headrest Mounting

Step 1. Remove the headrest from the seat. Adjust the width of mount the rail clamps and insert the headrest rails. Replace the headrest. Adjust the height of the mount and tighten the rail clamp knobs.



Adjust the lateral position of the swivel ball head and tighten the head lateral swivel knob for optimum viewing angle.



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:
USA (800) 841-0884
INT'L (626) 254-9005
Monday - Friday 9 am - 5 pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Designed in USA | Made in China and Taiwan
© Copyright 2011 Arkon Resources, Inc.